







 

 

 

 

 



 

 

 



 

 

 







 







 



 



 



 


 








Original		Rechange		Original		Rechange	
	D.Menu		D.Menu / Top		7		7
	Power		Power		8		8
	Open / Close		Eject / Surround		9		9
	Info		Info / Angle		Source		AV / Input / RDS
	P.Mode		Picture / Format		0		0
	S.Mode		Sound / Title		Q.View		Shift + Menu /
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	Audio I/II		Audio / Lang I/II		Guide		Guide / EPG / -/-
	Subtitle		Subtitle / EQ		Vol +		Vol+
	CH. List		Smart / List		P+		CH+ / Page+
	Screen		TV/Radio /		Vol -		Vol-
	1		1		P -		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		FAV		Fav / Marker / PC
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK





Original		Recharge		Original		Recharge	
	Right		Right		[=] / Setup	+	Shift + Setup / OPT / Tools
	Down		Down		[/ =] / Title	+	Shift + Sound / Title
	Exit		Exit / Cancel / Clear		[...] / Search		Text / Goto
	Record		Rec / Rec Mode		[...] / Search	+	Shift + Text /
	[X] / Repeat		Back / Return		[] / 10+	+	Shift + 9
	▶ / Index		Play / Slow		[] / 10+	+	Shift + 0
	⏸ Pause		Pause / Step / Freeze		[?] / Program	+	Shift + Guide / EPG / -/-
	■ Stop		Stop / Hold		[♦] / A-B	+	Shift + Fav / Marker / PC
	Red / ◀◀ / REV	+	Shift + Red / Netflix /		⊖ / Angle / Rec. List	+	Shift + TV/Radio / Program
	Red / ◀◀ / REV		Red / Netflix /		⊖ / Angle / Rec. List	+	Shift + Sleep / Timer
	Green / ▶▶ / FWD	+	Shift + Green / APP /		D.Call	+	Shift + D.Menu / Top Menu
	Green / ▶▶ / FWD		Green / APP / Repeat				
	Yellow / ◀◀◀ / Prev	+	Shift + Yellow / YouTube /				
	Yellow / ◀◀◀ / Prev		Yellow / YouTube /				
	Blue / ▶▶▶ / Next		Blue / Prime Video /				
	Blue / ▶▶▶ / Next		Random				
	Blue / ▶▶▶ / Next	+	Shift + Blue / Prime				
	[=] / Setup		Setup / OPT /				

