



 







 



 



 



 



 





 

 

 




 

 
 





 



 
 










Original		Rechange		Original		Rechange	
	Standby		Power		Left		Left
	Open/Close		Eject / Surround		OK		OK
	1		1		Right		Right
	2		2		I<<		I<< / Preset-
	3		3		Down		Down
	4		4		>>I		>>I / Preset+
	5		5		Display		Display / Media
	6		6		Angle		Info / Angle
	7		7		Title		Sound / Title
	8		8		Subtitle		Subtitle / EQ
	9		9		Mute		Mute / Dimmer
	Menu		Menu / Home		Play		Play / Slow
	0		0		Pause		Pause / Step / Freeze
	Set/Vol		Smart / List		Stop		Stop / Hold
	<<		<< / Tune-		Return		Back / Return
	Up		Up		Language/Audio		Audio / Lang I/II
	>>		>> / Tune+		Repeat		Green / APP / Repeat



