





 




 

 
 






 


 




















 




 









Original	Recharge	Original	Recharge
 Power	 Power	 9	 9
 Sleep	 Sleep / Timer	 EPG	 Guide / EPG / -/-
 Screen	 Picture / Format	 0	 0
 Presets	 Setup / OPT /	 SWAP	 Fav / Marker / PC
	 TV/Radio /		 D.Menu / Top
 FAV	 Shift + Fav / Marker / PC	 World	 Smart / List
 Lang	 Audio / Lang I/II	 Source	 AV / Input / RDS
 Subtitle	 Subtitle / EQ	 Menu	 Menu / Home
 TXT	 Text / Goto	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 OK
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 C	 Exit / Cancel / Clear
 6	 6	 Disp.	 Display / Media
 7	 7	 Search Mode	 Shift + Red / Netflix /
 8	 8	 Return	 Back / Return





Original	Recharge
	
CH+	CH+ / Page+
	
Info	Info / Angle
	
Vol+	Vol+
	
CH-	CH- / Page-
	
Mute	Mute / Dimmer
	
Vol-	Vol-
	
Rec	Rec / Rec Mode
	
Pause	Pause / Step / Freeze
	
I<<	I<< / Preset-
	
>>I	>>I / Preset+
	
<<	<< / Tune-
	
Play	Play / Slow
	
Stop	Stop / Hold
	
>>	>> / Tune+
	
Red/↑/Zoom	Red / Netflix / Search
	
Red/↑/Zoom	Zoom / Size
	
Green/↓/Repeat	Green / APP / Repeat

Original	Recharge
	
Yellow/Root	Yellow / YouTube / Repeat
	
Blue/Title	Blue / Prime Video / Random

