






 







 

 
























Original	Rechange
 Power	 Power
 O/D/N	 D.Menu / Top
 Sound / Title	 Sound / Title
 Shift + Back / Return	 Shift + Back / Return
 Source	 AV / Input / RDS
 Info / Angle	 Info / Angle
 Audio / Lang I/II	 Audio / Lang I/II
 Shift + Text / Goto	 Shift + Text / Goto
 Red / Netflix / Search	 Red / Netflix / Search
 Text / Goto	 Text / Goto
 Green / APP / Repeat	 Green / APP / Repeat
 Yellow / YouTube / Repeat	 Yellow / YouTube / Repeat
 Blue / Prime Video / Random	 Blue / Prime Video / Random
 Menu / Home	 Menu / Home
 Back / Return	 Back / Return
 CH+ / Page+	 CH+ / Page+
 Up	 Up

Original	Rechange
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 OK	 OK
 CH- / Page-	 CH- / Page-
 Down	 Down
 Shift + Power	 Shift + Power
 Play / Slow	 Play / Slow
 Mute / Dimmer	 Mute / Dimmer
 TUNE- << / Tune-	 TUNE- << / Tune-
 Pause / Step / Freeze	 Pause / Step / Freeze
 TUNE+ >> / Tune+	 TUNE+ >> / Tune+
 Shift + Pause / Step / Freeze	 Shift + Pause / Step / Freeze
 I<< / Preset-	 I<< / Preset-
 Stop / Hold	 Stop / Hold
 P>>I DVD / Preset+	 P>>I / Preset+



