



Original	Recharge	Original	Recharge
	Power		Power
	[i+]		Info
	DTT/TV		TV/R
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	AV4		Shift + 4
	AV5		Shift + 5
	RGB1		Shift + 7
	RGB2		Shift + 8
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	♪ / S.Mode		Shift + Dual
	⦿ / P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / [ ]		3D				
	[ ]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[ ]		List				
	[ ]		Smart				
	[...]/Slide Show		Subt				
	[ ]/?/Rotate		Pre Ch				
	[ ]		Text				
	Swivel		Sleep				
	[ <> ]		Format				
	Photo		Media				







 
 
 













 
 




 
 

 

 

 

 

 

 


	Original	Recharge	Original	Recharge
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play			
	Stop			
	Pause			
	<<			
	>>			
	P+			
	P-			







Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

