



	Original	Rechange	Original	Rechange
	Power	Power		♪ / S.Mode
	[i+]	Info		Shift + Dual
	DTT/TV	TV/R		Shift + Format
	AV1	Shift + 1		Vol +
	AV2	Shift + 2		Vol -
	AV3	Shift + 3		I/II
	AV4	Shift + 4		Dual
	AV5	Shift + 5		Mute
	RGB1	Shift + 7		Ch +
	RGB2	Shift + 8		Ch -
	Menu	Menu		1
	Back	Back		2
	Up	Up		3
	Down	Down		4
	Right	Right		5
	Left	Left		6
	OK	Ok		7
				8
				9




 









 

 

 








 
 




Original		Rechange		Original		Rechange	
	0		0				
	2-4-12 / [ ]		3D				
	[ ]		Options				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	[ ]		List				
	[ ]		Smart				
	[...]/Slide Show		Subt				
	[ ]/?/Rotate		Pre Ch				
	[ ]		Text				
	Swivel		Sleep				
	[ <> ]		Format				
	Photo		Media				





	Original	Recharge	Original	Recharge
	Power			
	OK			
	Up			
	Down			
	Right			
	Left			
	Menu			
	Play			
	Stop			
	Pause			
	<<			
	>>			
	P+			
	P-			





Original		Rechange		Original		Rechange	
	Power		Power		8		8
	OK		Ok		9		9
	Up		Up		0		0
	Down		Down				
	Right		Right				
	Left		Left				
	P+		Ch +				
	P-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				

