


 
 


 













 




	Original	Recharge	Original	Recharge
	Power			
	Muting			
	Function			
	Display			
	Preset			
	Surround			
	Master Vol+			
	Master Vol-			
	>>			
	I<<			
	Enter			
	Pause			
	Stop			
	<<			
	>>			
	Play			

