















































 



 















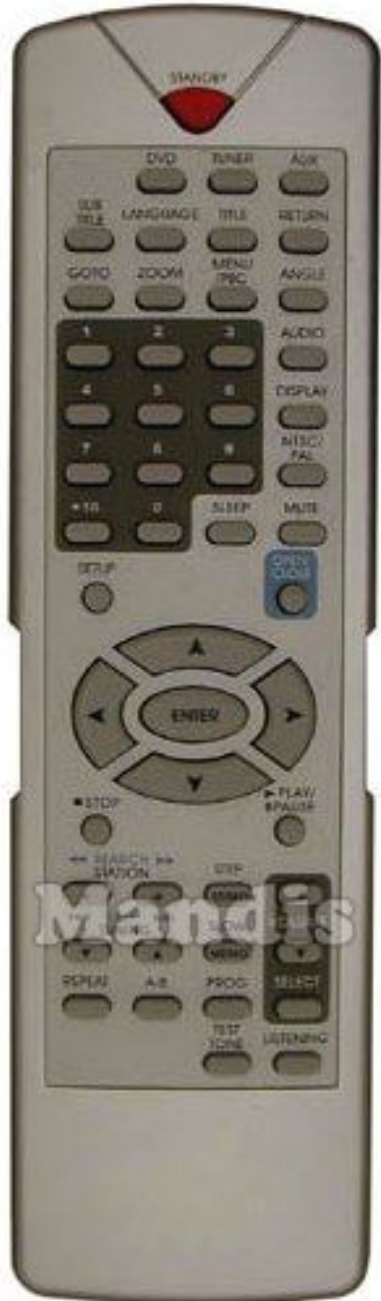




 





 

 

 











 

 

 











Original		Recharge		Original		Recharge	
	Standby		Power		5		5
	DVD		Shift + 2		6		6
	Tuner		Shift + 6		Display		Display / Media
	AUX		Shift + 7		7		7
	Subtitle		Subtitle / EQ		8		8
	Language		Shift + Audio / Lang I/II		9		9
	Title		Sound / Title		NTSC/PAL		Picture / Format
	Return		Back / Return		+10		Guide / EPG / -/-
	Goto		Text / Goto		0		0
	Zoom		Zoom / Size		Sleep		Sleep / Timer
	Menu/PBC		Menu / Home		Mute		Mute / Dimmer
	Angle		Info / Angle		Setup		Setup / OPT /
	1		1		Open/Close		Eject / Surround
	2		2		Up		Up
	3		3		Left		Left
	Audio		Audio / Lang I/II		Enter		OK
	4		4		Right		Right





Original	Recharge	Original	Recharge
 Down	 Down	 Test Tone	 AV / Input / RDS
 Stop	 Stop / Hold	 Listening	 Shift + Sound / Title
 Play/Pause	 Play / Slow		
 <<	 << / Tune-		
 Search	 >> / Tune+		
 St/Mo/Step	 Pause / Step / Freeze		
 Volume+	 Vol+		
 I<<	 I<< / Preset-		
 Tuning-	 CH- / Page-		
 >>I	 >>I / Preset+		
 Tuning+	 CH+ / Page+		
 Memo/Slow	 Rec / Rec Mode		
 Volume-	 Vol-		
 Repeat	 Green / APP / Repeat		
 A-B	 Yellow / YouTube / Repeat		
 Prog	 TV/Radio /		
 Select	 D.Menu / Top		

