







 





 

 

 

 



 



 

 

 

 

 

 



 



















 









Original		Rechange		Original		Rechange	
	Power		Power		Vol-		Vol-
	Source (Games)		AV / Input / RDS		World/Internet		Smart / List
	1		1		PR-		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		Q.Menu		D.Menu / Top
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Down		Down
	9		9		Back		Back / Return
	TV		TV/Radio /		Exit		Exit / Cancel / Clear
	0		0		i		Info / Angle
	Recall		Fav / Marker / PC		Movie-Music-Phot		Display / Media
	Vol+		Vol+		Guide		Guide / EPG / -/-
	Mute		Mute / Dimmer		*/o		Picture / Format
	PR+		CH+ / Page+		*/o..		Setup / OPT /





	Original	Recharge	Original	Recharge
	[≡]/Text	 GOTO TEXT		Text / Goto
	Red	 NETFLIX SEARCH		Red / Netflix / Search
	Green	 APP REPEAT		Green / APP / Repeat
	Yellow	 YouTube REPEAT A-B		Yellow / YouTube / Repeat
	Blue	 Prime Video RANDOM		Blue / Prime Video / Random
	Lang	 LANG I/II AUDIO		Audio / Lang I/II
	[≡]..	 EQ SUBTITLE		Subtitle / EQ
	[-o-]	 SIZE ZOOM		Zoom / Size
	<<	 TUNE- ◀		<< / Tune-
	Pause	 STEP-FREEZE 		Pause / Step / Freeze
	>>	 TUNE+ ▶		>> / Tune+
	Rec	 REC MODE ●		Rec / Rec Mode
	Play	 SLOW ▶		Play / Slow
	Stop	 HOLD ■		Stop / Hold

