



Original	Recharge	Original	Recharge
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<<
Tv/Radio	TV/Radio /		>>
Red/Goto	Red / Netflix / Search		D.Setup
Green/Angle	Green / APP / Repeat		Rec
Yellow/Repeat	Yellow / YouTube / Repeat		Stop
Blue/A-B	Blue / Prime Video / Random		I<<
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu
Freeze/Hold	Shift + Pause / Step /		Lang/Audio
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Recharge
	Play / Slow
	Pause / Step / Freeze
	<< / Tune-
	>> / Tune+
	Setup / OPT /
	Rec / Rec Mode
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Menu / Home
	Audio / Lang I/II
	Up
	Left
	OK
	Right
	Sleep / Timer
	Down





Original		Recharge	
	Title/Exit		Exit / Cancel / Clear
	Vol+		Vol+
	Mute		Mute / Dimmer
	CH+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	CH-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--

Original		Recharge	
	0		0
	Back		Back / Return
	Source		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title

