 










 

 

 




 
 
 
 
 
 
 

 


 
 
 

 
 







 
 

 

 

 



 



 


 
 



 




Original	Rechange	Original	Rechange
 Power	 Power	 P+	 Ch +
 Source	 AV	 P-	 Ch -
 1	 1	 Home	 Smart
 2	 2	 [G]	 Guide
 3	 3	 i	 Info
 4	 4	 BACK	 Back
 5	 5	 EXIT	 Exit
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 Ok
 Lang	 Dual	 *1	 Format
 TXT	 Text	 Prime video	 Media
 Vol+	 Vol +	 Netflix	 Shift + Media
 Vol-	 Vol -	 YouTube	 Shift + Smart
 Mute	 Mute	 <<	 <<

Original	Rechange	Original	Rechange
 P+	 Ch +	 TV	 MUTE
 P-	 Ch -	 DVD	 SHIFT
 Home	 Smart	 SAT	 AUX
 [G]	 Guide	 PLAY MODE	 REC MODE
 i	 Info	 TV	 DUAL
 BACK	 Back	 DUAL	 SUBT
 EXIT	 Exit	 AD	 SETTINGS
 Up	 Up	 SOUND	 OPT
 Down	 Down	 PICTURE	 ECO
 Right	 Right	 SLEEP	 3D
 Left	 Left	 TV/R	 TIMER
 OK	 Ok	 FORMAT	 AV
 *1	 Format	 RETURN	 BACK
 Prime video	 Media	 CLEAR	 EXIT
 Netflix	 Shift + Media	 EXIT	 OK
 YouTube	 Shift + Smart	 RETURN	 BACK
 <<	 <<	 HOME	 SMART
		 APP	 CH -
		 MEDIA	 VOL +
		 HOME	 VOL -
		 SMART	 CH +
		 MEDIA	 1
		 APP	 2
		 HOME	 3
		 SMART	 4
		 MEDIA	 5
		 APP	 6
		 HOME	 7
		 SMART	8
		MEDIA	9
		APP	0
		HOME	FAV
		SMART	PRE-CH
		MEDIA	A
		APP	B
		HOME	C
		SMART	D
		MEDIA	





Original	Recharge
 Pause	 Pause
 >>	 >>
 Rec	 REC MODE Rec
 Play	 PLAY MODE Play
 Stop	 Stop
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue

Original	Recharge

