



Original	Recharge
Power Audio	Power
Display/Chara	Info
Tv/Video	TV/R
Level Meter	Media
Motion Sensor	Smart
Title/Del	Options
Eco/Dimmer	Shift + 3D
1/Mark	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Recharge
>10	Pre Ch
10	Guide
Karaoke Scoring	Shift + Smart
Reserve	Shift + Options
Vocal Masking	Shift + Dual
Vocal Support	Shift + Subt
Menu/PL	Menu
Top Menu/PG	Shift + Menu
On Screen	Shift + Info
Fade Muting	Mute
Up/PTY+	Up
Down/PTY-	Down
Right/TA/News/Inf	Right
Left/PTY Search	Left
Audio Vol+	Vol +
Audio Vol-	Vol -
Sleep	Sleep





Original	Recharge	Original	Recharge
A.Stby	Shift + 0	Audio/MPX	Dual
Clock/Timer	AV	Subtitle	Subt
Return	Back	Zoom	Eject
Cancel	Exit	Tuner/Audio In	Text
Set Up	D. Menu	File Type	Shift + TV/R
Stop	Stop	Repeat	Shift + Text
Play	Play	VFP/Scan Mode	Format
Pause	Pause	3D Phonic/HP Surr	3D
←/Tuner/Play	Shift + Back	C.Voice	Shift + List
I<<	I<<	DVD/Audio In	Shift + Format
>>I	>>I	Sound Mode	List
<<	<<	My Sound	Shift + Mute
>>	>>	V.Bass	Shift + 7
Play/Pause	Blue	Super Bass	Ch +
Play/Pause USB	Yellow	Super Bass Level-	Ch -
Play/Pause iPod A	Red	Mic Vol+	Shift + Right
Play/Pause iPod B	Green	Mic Vol-	Shift + Left







	Original	Rechange
	Karaoke Setting	SHIFT + 9 Shift + 9
	Mic Mix	SHIFT + 8 Shift + 8
	Power Tv	SHIFT + [Power] Shift + Power
	Repeat A-B	SHIFT + [Play] Shift + Play
	Angle	SHIFT + 2 Shift + 2
	Tv Channel+	SHIFT + CH+ Shift + Ch +
	Tv Channel-	SHIFT + CH- Shift + Ch -
	Tv Vol+	SHIFT + VOL+ Shift + Vol +
	Tv Vol-	SHIFT + VOL- Shift + Vol -
	I<< Group/Title Skip	SHIFT + I<< Shift + I<<
	Group/Title Skip >>I	SHIFT + I>> Shift + I>>
	>> Group/Title	SHIFT + 6 Shift + 6
	Enter/Set	OK Ok

Original	Rechange

