


 
 





Original		Rechange		Original		Rechange	
	Power Audio		Power		>>/Slow+		>>
	Power Tv		Shift + Power		Stop		Stop
	Tv/Video		TV/R		Pause		Pause
	Eject		Eject		I<<		I<<
	Display		Info		>>I		>>I
	Dimmer		Smart		Up/Tuning+		Up
	Vol+ Audio		Vol +		Down/Tuning-		Down
	Vol- Audio		Vol -		Right/Preset+		Right
	CH+ Tv		Ch +		Left/Preset-		Left
	CH- Tv		Ch -		Enter		Ok
	> USB Memory		Red		Back		Back
	FM/AM		Green		Repeat		Text
	Line		Yellow		Clock/Timer		Shift + AV
	Fade Muting		Mute		Play Tuner		Guide
	K2		Blue		I<< Group/Title		Shift + Ch -
	Play DVD/CD		Play		>>I Group/Title		Shift + Ch +
	<</Slow-		<<		Vol+ Tv		Shift + Right





Original	Rechange
Vol- Tv	+  Shift + Left
Top Menu/PG	+  Shift + Menu
Menu/PL	Menu
Audio	Dual
Subtitle	Subt
Zoom	+  Shift + Eject
Angle	3D
Page	+  Shift + Media
Return	+  Shift + Back
Cancel	Exit
1	1
2	2
3	3
4	4
5	5
6	6
7	7

Original	Rechange
8	8
9	9
0	0
10/Tv Return	+  Shift + Guide
+10/100+	Pre Ch
Set Up	Media
3D Phonic	AV
HP Surround	+  Shift + Subt
Clear Voice	List
VFP	Options
Scan Mode	Format
QP Link	+  Shift + Smart
Sleep	Sleep
A.Standby	+  Shift + Red
Output Level	+  Shift + 3D
Input Level	+  Shift + TV/R
S.WFR Out	+  Shift + Mute







Original

Rechange

	DVD Level		D. Menu
	Treble+	 + 	Shift + 3
	Treble-	 + 	Shift + 6
	Bass+	 + 	Shift + 1
	Bass-	 + 	Shift + 4
	On Screen	 + 	Shift + Info

Original

Rechange






Original		Rechange		Original	Rechange
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	10/Tv Return		Guide		
	0		0		
	+10/100+		Pre Ch		
	Vol+ Tv		Vol +		
	Vol- Tv		Vol -		
	CH+ Tv		Ch +		
	CH- Tv		Ch -		

