



Original		Recharge		Original		Recharge	
	Power		Power		X		Back / Return
	Review		Smart / List		9		9
	Left/ <</-		Left		0		0
	Left/ <</-		<< / Preset-		Timer		Sleep / Timer
	Right/>> /+		Right		PR+		CH+ / Page+
	Right/>> /+		>>  / Preset+		Start Debut +		Green / APP / Repeat
	Tv/VCR		AV / Input / RDS		Start Debut -		Red / Netflix / Search
	--:--		Exit / Cancel / Clear		Stop Fin +		Blue / Prime Video / Random
	Audio		Audio / Lang I/II		PR-		CH- / Page-
	1		1		Stop Fin -		Yellow / YouTube / Repeat
	2		2		Date-		Vol-
	3		3		Date+		Vol+
	4		4		Prog		TV/Radio /
	5		5		<<		<< / Tune-
	6		6		30 Sec/>>		Display / Media
	7		7		Timer/?		Shift + Sleep / Timer
	8		8		Play		Play / Slow





Original	Recharge
'I'	Guide / EPG / -/--
>>	>> / Tune+
Rec	Rec / Rec Mode
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Menu	Menu / Home
OK	OK
Up	Up
Down	Down
Tv Vol-	Shift + Vol-
Tv Vol+	Shift + Vol+
Tv PR-	Shift + CH- /
Tv PR+	Shift + CH+ /
Tv/VCR Tv	Shift + AV / Input / RDS
Power Tv	Shift + Power
Mute Tv	Shift + Mute / Dimmer

Original	Recharge

