



Original	Recharge
Power	Power
Tuner	+ Shift + 6
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
.	Setup / OPT /
Mute	Mute / Dimmer
You Tube	+ Shift + Yellow / YouTube /
Internet	Display / Media

Original	Recharge
Home	+ Shift + Menu /
Netflix	+ Shift + Red / Netflix /
Vol+	Vol+
Vol-	Vol-
CH+	CH+ / Page+
CH-	CH- / Page-
*	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Back	Back / Return
Exit	Exit / Cancel / Clear
Info	Info / Angle
USB	+ Shift + 8
=	Text / Goto





Original	Rechange
Sleep	Sleep / Timer
Guide	Guide / EPG / -/--
FAV	Fav / Marker / PC
CH.List	Smart / List
Picture	Picture / Format
Sound	Sound / Title
CC	Subtitle / EQ
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze
>I	>>I / Preset+
<<	<< / Tune-

Original	Rechange
>>	>> / Tune+
MTS	D.Menu / Top

