













 





























 






 

 


















	Original	Recharge	Original	Recharge
	Color	 Picture / Format	 9	 9
	Dimmer	 Mute / Dimmer	 Display(9)	 Shift + Display / Media
	Standby/On	 Power	 Set	 Menu / Home
	Clock/Timer	 Shift + Sleep / Timer	 10/←	 Guide / EPG / -/-
	FM Mode	 TV/Radio /	 0	 0
	Sleep	 Sleep / Timer	 - Select	 Left
	1	 1	 →/+10	 Fav / Marker / PC
	2	 2	 Select+	 Right
	3	 3	 Cancel	 Exit / Cancel / Clear
	Display	 Display / Media	 Rev. Mode	 Back / Return
	4	 4	 Repeat	 Green / APP / Repeat
	5	 5	 Play Mode	 Subtitle / EQ
	6	 6	 CD Play/Pause	 Play / Slow
	7	 7	 FM/AM	 Shift + 6
	PTY	 Red / Netflix / Search	 Tape/<>	 Shift + 5
	8	 8	 AUX/MD	 AV / Input / RDS
	TA/News/Info	 Info / Angle	 I<<	 I<< / Preset-





Original	Recharge	Original	Recharge
Stop	Stop / Hold		
>>I	>>I / Preset+		
Beep	Setup / OPT /		
Sound Mode/♪	Sound / Title		
Ahb Pro	Smart / List		
Vol-	Vol-		
Vol+	Vol+		

