



Original	Recharge
Power Audio	Power
Power Tv	Shift + Power
1	1
2	2
3	3
5	5
4	4
6	6
7	7
8	8
9	9
0	0
10	Guide / EPG / -/-
+10	Fav / Marker / PC
Audio Vol+	Vol+
Audio Vol-	Vol-
Fade Muting	Mute / Dimmer

Original	Recharge
Menu/PL	Menu / Home
Top Menu/PG	D.Menu / Top
On Screen	Display / Media
Play	Play / Slow
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Back/Tuner/Play Mode	Back / Return
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
>>	>> / Tune+
Play/Pause	Red / Netflix / Search
Play/Pause USB	Shift + Play /
Play/Pause	Shift + Yellow / YouTube /
Play/Pause Bluetooth	Blue / Prime Video / Random
Audio/MPX	Audio / Lang I/II
Subtitle	Subtitle / EQ





Original	Rechange
Zoom	Zoom / Size
Audio In	Shift + Display / Media
File Type	Text / Goto
Repeat	Green / APP / Repeat
VFP/Scan Mode	AV / Input / RDS
3D Phonic/HP	TV/Radio /
C.Voice	Shift + Setup / OPT / Tools
DVD Audio In	Shift + Sound / Title
My Sound	Picture / Format
Sound Mode	Sound / Title
Subwoofer Level+	CH+ / Page+
V.Bass	Shift + Audio / Lang I/II
Subwoofer Level-	CH- / Page-
Repeat A-B	Yellow / YouTube / Repeat
Cancel	Exit / Cancel / Clear
Set Up	Setup / OPT /
Return	Shift + Back / Return

Original	Rechange
Angle	Info / Angle
Tv Vol+	Shift + Right
Tv Vol-	Shift + Left
Enter/Set	OK
Up	Up
Down	Down
Right	Right
Left	Left
Sleep	Sleep / Timer
A.STBY	Shift + 0
Clock/Timer	Shift + Sleep / Timer
MIC Vol+	Shift + Up
MIC Vol-	Shift + Down
Karaoke Setting	Smart / List
Mic Mix	Shift + Smart / List
TV Channel+	Shift + CH+ /
Vocal Masking	Eject / Surround





Original	Rechange
TV Channel-	Shift + CH- /
Karaoke Scoring	Shift + AV / Input / RDS
Reserve	Shift + Zoom /
Title/Edit/Bluetooth Setting	Shift + 1
Level Meter	Shift + 2
Motion Sensor	Shift + 3
Vocal Support	Shift + Subtitle / EQ
Display/Chara	Shift + 4
Eco Dimmer	Shift + 5
Tv/Video	Shift + 6
Group Title >>	Shift + 9
Group Title Skip >>I	Shift + 8
I<< Group Title Skip	Shift + 7
Rec Mode	Rec / Rec Mode
Title Search	Shift + OK

Original	Rechange

