










Original	Recharge	Original	Recharge
 Power	 Power	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 P+	 CH+ / Page+
 4	 4	 Zurück	 Back / Return
 5	 5	 Vol+	 Vol+
 6	 6	 P-	 CH- / Page-
 7	 7	 Esc / TV	 Exit / Cancel / Clear
 8	 8	 Vol-	 Vol-
 9	 9	 Text	 Text / Goto
 0	 0	 Mute	 Mute / Dimmer
 Liste	 Smart / List	 Red	 Red / Netflix / Search
 EPG	 Guide / EPG / -/--	 Green	 Green / APP / Repeat
 PPV	 D.Menu / Top	 Yellow	 Yellow / YouTube / Repeat
 Dienste	 Display / Media	 Blue	 Blue / Prime Video / Random
 Up	 Up	 TV / Radio	 TV/Radio /
 Left	 Left	 Opt	 Setup / OPT /

Original	Recharge	Original	Recharge
 OK	 OK	 OK	 OK
 Right	 Right	 Right	 Right
 Down	 Down	 Down	 Down
 P+	 CH+ / Page+	 P+	 CH+ / Page+
 Zurück	 Back / Return	 Zurück	 Back / Return
 Vol+	 Vol+	 Vol+	 Vol+
 P-	 CH- / Page-	 P-	 CH- / Page-
 Esc / TV	 Exit / Cancel / Clear	 Esc / TV	 Exit / Cancel / Clear
 Vol-	 Vol-	 Vol-	 Vol-
 Text	 Text / Goto	 Text	 Text / Goto
 Mute	 Mute / Dimmer	 Mute	 Mute / Dimmer
 Red	 Red / Netflix / Search	 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat	 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat	 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random	 Blue	 Blue / Prime Video / Random
 TV / Radio	 TV/Radio /	 TV / Radio	 TV/Radio /
 Opt	 Setup / OPT /	 Opt	 Setup / OPT /





Original		Recharge		Original		Recharge	
	i		Info / Angle				
	Menu		Menu / Home				

