


 
 

 


 


 
 
 
 

 
 

 
 

 
 


 


 


 

 
 

 
 


 

 
 
 
 
 

 
 


 




	Original	Rechange		Original	Rechange
	Power		Power		Vol -
	Open / Close		Exit		Setup
	1		1		Title
	2		2		Up
	3		3		Right
	4		4		Down
	5		5		Left
	6		6		Enter
	7		7		PBC
	8		8		Menu
	9		9		Audio
	0		0		Zoom
	10+		Guide		USB / Card
	Search		TV/R		Step II>
	Display		Shift + Info		Stop
	Subtitle		Subt		Play / Pause
	Vol +		Vol +		Play / Pause
					Shift + Pause
					Stop
					Play
					Pause



