















































 







































Original	Rechange	Original	Rechange
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 Power	 Power	 Left	 Left
 PP	 Back / Return	 Up	 Up
 I-II	 Audio / Lang I/II	 P+	 CH+ / Page+
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 P-	 CH- / Page-
 4	 4	 Vol-	 Vol-
 5	 5	 Vol+	 Vol+
 6	 6	 Red/Sound	 Red / Netflix / Search
 7	 7	 Red/Sound	 Sound / Title
 8	 8	 Green/Picture	 Green / APP / Repeat
 9	 9	 Green/Picture	 Picture / Format
 0	 0	 Yellow/Feature	 Yellow / YouTube / Repeat
 --	 Guide / EPG / -/--	 Blue/Install	 Blue / Prime Video / Random
 P<P	 Fav / Marker / PC	 TV	 TV/Radio /
 Menu	 Menu / Home	 AV	 AV / Input / RDS





Original	Recharge
 [≡]	 Text / Goto
 [/≡]	 Shift + Text /
 [≡o]	 Sleep / Timer
 [≡+]	 Stop / Hold
 [≡x]	 Setup / OPT /
 [≡◆]	 Zoom / Size
 [≡?]	 Smart / List
 [≡i]	 Display / Media

Original	Recharge

