



Original		Rechange		Original		Rechange	
	Auto Memory		Green / APP / Repeat		9		9
	Memory		Red / Netflix / Search		Sound		Sound / Title
	Power Receiver		Power		+10		Guide / EPG / -/-
	PTY		Info / Angle		0		0
	Display		Display / Media		HDMI Setup		Menu / Home
	Virtual		Smart / List		Setup		Setup / OPT /
	Active EQ		Subtitle / EQ		Listen Mode		Blue / Prime Video / Random
	1		1		Pure Audio		Yellow / YouTube / Repeat
	2		2		Multi Control		CH- / Page-
	3		3		Multi Control Up		CH+ / Page+
	Bass Boost		Eject / Surround		Volume+		Vol+
	4		4		Volume-		Vol-
	5		5		Band		TV/Radio /
	6		6		Auto/Mono		Audio / Lang I/II
	Tone		Text / Goto		Mute		Mute / Dimmer
	7		7		P.Call-		I<< / Preset-
	8		8		P.Call+		>>I / Preset+







 



 

















	Original	Rechange	Original	Rechange
	Tuning-		<< / Tune-	
	Tuning+		>> / Tune+	
	HDMI 1		Shift + 8	
	HDMI2		Shift + 9	
	HDMI 3		Shift + Guide / EPG / -/-	
	HDMI 4		Shift + 0	
	DVD		Shift + 2	
	Video		Shift + 4	
	CD		Shift + 3	
	AUX		Shift + 7	
	TV		Shift + 1	
	AV AUX		Shift + 5	
	Tuner		Shift + 6	
	Dimmer		Shift + Mute / Dimmer	





Original	Recharge
 Power DVD	 Power
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10	 Guide / EPG / -/--
 0	 0
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Up	 Up

Original	Recharge
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 On Screen	 Display / Media
 Return	 Back / Return
 Pause	 Pause / Step / Freeze
 Play/Pause	 Play / Slow
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 <<	 << / Tune-
 >>	 >> / Tune+

