





 



 












 














 

 



 
 
 












 
















 


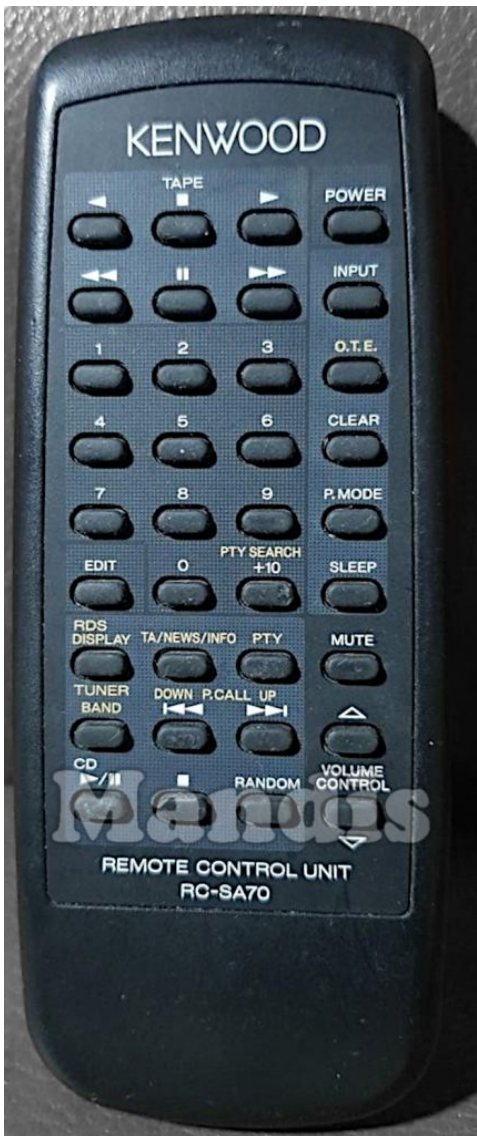

Original	Rechange	Original	Rechange
	< Tape		Left
	Stop Tape		OK
	Tape >		Right
	Power		Power
	<< Tape		Down
	Tape Pause		Back / Return
	>> Tape		Up
	Input		AV / Input / RDS
	1		1
	2		2
	3		3
	O.T.E.		Rec / Rec Mode
	4		4
	5		5
	6		6
	Clear		Exit / Cancel / Clear
	7		7
	8		8
	9		9
	P.Mode		Picture / Format
	Edit		Text / Goto
	0		0
	+10/PTY Search		Red / Netflix / Search
	+10/PTY Search		Guide / EPG / -/--
	Sleep		Sleep / Timer
	RDS Display		Display / Media
	TA/News/Info		Info / Angle
	PTY		Smart / List
	Mute		Mute / Dimmer
	Tuner Band		Shift + 6
	Tuner Band		TV/Radio /
	I<< P.Call		I<< / Preset-
	>>I P.Call Up		>>I / Preset+
	Control Volume		Vol+



Up



	Original	Recharge		Original	Recharge
	Pause CD		Pause / Step / Freeze		
	Play CD		Play / Slow		
	Stop CD		Stop / Hold		
	Random		Blue / Prime Video / Random		
	Control Volumen Down		Vol-		

	Original	Recharge

