



 



























 

 

 



































Original		Rechange		Original		Rechange	
	Power		Power		Up		Up
	EPG		Guide / EPG / -/--		Display		Display / Media
	REP		TV/Radio /		Left		Left
	Mute		Mute / Dimmer		OK		OK
	Rec List		Shift + Rec / Rec Mode		Right		Right
	CH List		Smart / List		Menu		Menu / Home
	Subtitle		Subtitle / EQ		Down		Down
	Eject		Eject / Surround		Exit		Exit / Cancel / Clear
	Rec		Rec / Rec Mode		1		1
	Stop		Stop / Hold		2		2
	I<<		I<< / Preset-		3		3
	>>I		>>I / Preset+		4		4
	Pause		Pause / Step / Freeze		5		5
	Play		Play / Slow		6		6
	<<		<< / Tune-		7		7
	>>		>> / Tune+		8		8
	Source		AV / Input / RDS		9		9





Original	Recharge
0	0
↶	RETURN BACK
FAV	PC FAV MARKER
▲ VOL	+ VOL
PICTURE	FORMAT PICTURE
NICAM/A2	LANG I/II AUDIO
▲ CH	+ CH PAGE
▼ VOL	- VOL
SOUND	TITLE SOUND
SLEEP	TIMER SLEEP
▼ CH	- CH PAGE
Red	NETFLIX SEARCH
Green	APP REPEAT
Yellow	YouTube REPEAT A-B
SCREEN	Prime Video RANDOM
TV/TXT SETUP	OPT-TOOLS SETUP
CANCEL D-MENU	TOP MENU D.MENU

Original	Recharge
REVEAL TITLE	SHIFT + TITLE SOUND
PRO	SHIFT + MEDIA DISPLAY
HOLD LAN	SHIFT + LIST SMART
SIZE A-B	SIZE ZOOM
SUBPAGE GOTO	GOTO TEXT
INDEX SLOW	ANGLE INFO

Cancel

Menu

