 









 



 







 


 



 



 




 


 
















Original		Rechange		Original		Rechange	
	AV/Input		AV / Input / RDS		Return		Back / Return
	Power		Power		Rec		Rec / Rec Mode
	Open/Close		Eject / Surround		Marker		Fav / Marker / PC
	DVD		Shift + 2		Stop		Stop / Hold
	HDD		Shift + 7		Play		Play / Slow
	O)))/Audio		Audio / Lang I/II		Pause/Step		Pause / Step / Freeze
	Title		Sound / Title		I<< Skip		I<< / Preset-
	Display		Display / Media		<< Scan		<< / Tune-
	Home		Shift + Menu /		Scan >>		>> / Tune+
	Menu/List		Menu / Home		>>I Skip		>>I / Preset+
	Up		Up		Red/FAV		Red / Netflix / Search
	PR/CH+		CH+ / Page+		Green/Repeat		Green / APP / Repeat
	Left		Left		Yellow/Subtitle		Yellow / YouTube / Repeat
	Enter		OK		Blue		Blue / Prime Video / Random
	Right		Right		Text		Text / Goto
	Down		Down		EPG		Guide / EPG / -/-
	PR/CH-		CH- / Page-		Timeshift		Sleep / Timer





Original	Recharge
Clear	Exit / Cancel / Clear
Power Tv	+ Shift + Power
1	1
2	2
3	3
PR/CH+ Tv	+ Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	+ Shift + CH- /
7	7
8	8
9	9
Vol+ Tv	Vol+
Tv/DVD	TV/Radio /
0	0
Vol- Tv	Vol-

Original	Recharge
AV Input Tv	+ Shift + Eject / Surround

