










 

























| Original     | Rechange  | Original         | Rechange  |
|--------------|---|------------------|---|
| Power        |    | Power            |   |
| OK           |    | OK               |   |
| Up           |    | Up               |   |
| Down         |    | Down             |   |
| Right        |    | Right            |   |
| Left         |    | Left             |   |
| Back         |    | Back / Return    |   |
| Vol +        |    | Vol+             |   |
| Vol -        |    | Vol-             |   |
| Home / Smart |    | Menu / Home      |   |
| 3D           |  +  Shift + 3 |                  |   |
| Mute         |   | Mute / Dimmer    |   |
| P +          |    | CH+ / Page+      |   |
| P -          |    | CH- / Page-      |   |
| Ratio        |    | Picture / Format |   |
| List         |    | Smart / List     |   |
| Q.Menu       |    | D.Menu / Top     |   |
|              |   | Subtitle         |  Subtitle / EQ                 |
|              |   | Settings         |  Setup / OPT /                 |
|              |   | >>               |  >>I / Preset+                 |
|              |   | >>               |  >> / Tune+                    |
|              |   | Play             |  Play / Slow                   |
|              |   | AD / PIP         |  Sound / Title                 |
|              |   | <<               |  I<< / Preset-                 |
|              |   | <<               |  << / Tune-                    |
|              |   | Rec              |  Rec / Rec Mode                |
|              |   | Pause            |  Pause / Step / Freeze         |
|              |   | Text             |  Text / Goto                   |
|              |   | FAV              |  Fav / Marker / PC            |
|              |   | Exit             |  Exit / Cancel / Clear       |
|              |   | Input            |  AV / Input / RDS            |
|              |   | Blue             |  Blue / Prime Video / Random |
|              |   | Yellow           |  Yellow / YouTube / Repeat   |
|              |   | Stop / Live TV   |  Stop / Hold                 |



| Original   | Recharge  | Original      | Recharge  |
|------------|---|---------------|---|
| AV Mode    |  +  Shift + AV / Input / RDS  | 5             |  5   |
| Green      |  Green / APP / Repeat  | Q.View        |  +  Shift + Display / Media     |
| Red        |  Red / Netflix / Search  | 4             |  4   |
| 0          |  0   | Live Zoom     |  Zoom / Size   |
| AD         |  Audio / Lang I/II   | 3             |  3   |
| TV / PC    |  +  Shift + Fav / Marker / PC | 2             |  2   |
| Search     |  +  Shift + Red / Netflix /   | 1             |  1   |
| App        |  +  Shift + Green / APP /     | T.Opt         |  +  Shift + Setup / OPT / Tools |
| TV / Radio |  TV/Radio /  | Energy Saving |  Eject / Surround  |
| Guide      |  Guide / EPG / -/--  | My APPS       |  +  Shift + Smart / List        |
| Info       |  Info / Angle  |               |   |
| Recent     |  Sleep / Timer   |               |   |
| 9          |  9   |               |   |
| 8          |  8   |               |   |
| 7          |  7   |               |   |
| Live Menu  |  Display / Media   |               |   |
| 6          |  6   |               |   |

