












 









Original	Recharge	Original	Recharge
Power		Power	EQ / SUBTITLE
OK		OK	OPT-TOOLS / SETUP
Up		Up	PRESET+
Down		Down	TUNE+
Right		Right	SLOW
Left		Left	TITLE / SOUND
Back		Back / Return	PRESET-
Vol +		Vol+	TUNE-
Vol -		Vol-	REC MODE
Home / Smart		Menu / Home	STEP-FREEZE
3D	 +  Shift + 3	Shift + 3	GOTO / TEXT
Mute		Mute / Dimmer	PC / FAV MARKER
P +		CH+ / Page+	CLEAR / EXIT / CANCEL
P -		CH- / Page-	RDS / AV INPUT
Ratio		Picture / Format	Prime Video / RANDOM
List		Smart / List	YouTube / REPEAT A-B
Q.Menu		D.Menu / Top	HOLD
		Subtitle	Subtitle / EQ
		Settings	Setup / OPT /
		>>	>> / Preset+
		>>	>> / Tune+
		Play	Play / Slow
		AD / PIP	Sound / Title
		<<	I<< / Preset-
		<<	<< / Tune-
		Rec	Rec / Rec Mode
		Pause	Pause / Step / Freeze
		Text	Text / Goto
		FAV	Fav / Marker / PC
		Exit	Exit / Cancel / Clear
		Input	AV / Input / RDS
		Blue	Blue / Prime Video / Random
		Yellow	Yellow / YouTube / Repeat
		Stop / Live TV	Stop / Hold



Original	Recharge	Original	Recharge
AV Mode	 +  Shift + AV / Input / RDS	5	 5
Green	 Green / APP / Repeat	Q.View	 +  Shift + Display / Media
Red	 Red / Netflix / Search	4	 4
0	 0	Live Zoom	 Zoom / Size
AD	 Audio / Lang I/II	3	 3
TV / PC	 +  Shift + Fav / Marker / PC	2	 2
Search	 +  Shift + Red / Netflix /	1	 1
App	 +  Shift + Green / APP /	T.Opt	 +  Shift + Setup / OPT / Tools
TV / Radio	 TV/Radio /	Energy Saving	 Eject / Surround
Guide	 Guide / EPG / -/--	My APPS	 +  Shift + Smart / List
Info	 Info / Angle		
Recent	 Sleep / Timer		
9	 9		
8	 8		
7	 7		
Live Menu	 Display / Media		
6	 6		

