 



 



 
 


 
 


 
 
 
 




 
 








 
 




 

 
 
 

 



 



 



 
 
 

 



 





Original	Recharge	Original	Recharge
 Power	 Power	 Scan >>	 >>
 Open/Close	 Eject	 I<< Skip	 I<<
 Subtitle	 Subt	 Skip >>I	 >>I
 Info/Menu	 Menu	 Enter	 Ok
 Disc Menu	 D. Menu	 Up/Preset+	 Up
 Home	 Smart	 Down/Preset-	 Down
 Back	 Back	 Left/Tuning-	 Left
 Sleep	 Sleep	 Right/Tuning+	 Right
 Function	 AV	 Red	 Red
 Title/PopUp	 Info	 Green	 Green
 Vol+	 Vol +	 Yellow	 Yellow
 Vol-	 Vol -	 Blue/Mono/Stereo	 Blue
 Mute	 Mute	 1	 1
 Play	 Play	 2	 2
 Pause/Step	 Pause	 3	 3
 Stop	 Stop	 4	 4
 << Scan	 <<	 5	 5





Original		Rechange		Original		Rechange	
	6		6		PR/CH- Tv		Ch -
	7		7		Vol+ Tv		Shift + Vol +
	8		8		Vol- Tv		Shift + Vol -
	9		9		Mute Tv		Shift + Mute
	0		0				
	Rec		Rec				
	Audio		Dual				
	MIC/ECHO		Options				
	Repeat		Text				
	Clear		Exit				
	*		Guide				
	Optical/Tv Sound		TV/R				
	Sound Effect		3D				
	Speaker Level		Format				
	Power Tv		Shift + Power				
	AV/Input Tv		Shift + AV				
	PR/CH+ Tv		Ch +				

