




















Original	Rechange
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Vol+	 Vol+
 Mute/AD	 Mute / Dimmer
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-

Original	Rechange
 Home/Recent	 Menu / Home
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 Wheel Up	 >> / Preset+
 Right	 Right
 OK	 OK
 Wheel Down	 << / Preset-
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 3D	 Picture / Format
 Source	 AV / Input / RDS
 *	 D.Menu / Top
 Text	 Text / Goto
 T.Opt	 Setup / OPT /
 Play	 Play / Slow





Original	Recharge	Original	Recharge
 Pause	 Pause / Step / Freeze		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

Original	Recharge

