



Original	Rechange	Original	Rechange
	Power		Power
	Back		Back / Return
	Home		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Info/Menu/123		Info / Angle
	Stop		Stop / Hold
	I<</<<		<< / Tune-
	>>/>>I		>> / Tune+
	Red		Red / Netflix / Search
	Blue		Blue / Prime Video / Random
	Green		Green / APP / Repeat

Original	Rechange
	Yellow / YouTube / Repeat

