 

 
 
 


 

 





 



 

 


 



 







 



 

 

















 

 

 








Original		Rechange		Original		Rechange	
	Power		Power		XTS Pro		D. Menu
	Open/Close		Eject		Marker		Format
	Band		Red		Search		TV/R
	DVD		Green		O)))/Audio		Dual
	AUX		Yellow		[...]/Subtitle		Subt
	USB		Blue		Sound	 + 	Shift + <<
	VSM		Pre Ch		Return		Back
	1		1		Setup		Options
	2		2		Display		Info
	3		3		Up/Preset+		Up
	4		4		Down/Preset-		Down
	5		5		Right/Tun+		Right
	6		6		Left/Tun-		Left
	7		7		Enter		Ok
	8		8		Menu		Menu
	9		9		Title		List
	0		0		<</Scan-		<<



