



 














 





Original	Rechange
 Power	 Power
 Open/Close	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Clear	 Exit / Cancel / Clear
 <<	 << / Tune-
 >>	 >> / Tune+
  <<	  << / Preset-
 >>	 >>  / Preset+

Original	Rechange
 Play	 Play / Slow
 Pause/Step	 Pause / Step / Freeze
 Stop	 Stop / Hold
 DVD Menu	 D.Menu / Top
 Title	 Sound / Title
 Up	 Up
 Enter	 OK
 Down	 Down
 Right	 Right
 Left	 Left
 Return	 Back / Return
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Setup	 Setup / OPT /
 Marker	 Fav / Marker / PC





Original	Recharge
SEARCH - Search	NETFLIX SEARCH - Red / Netflix / Search
PROGRAM - Program	SHIFT + PROGRAM TV/RADIO - Shift + TV/Radio / Program
ZOOM - Zoom	SIZE ZOOM - Zoom / Size
REPEAT - Repeat	APP REPEAT - Green / APP / Repeat
A-B - A-B	YouTube REPEAT A-B - Yellow / YouTube / Repeat
RESOLUTION - Resolution	PROGRAM TV/RADIO - TV/Radio /
* - *	Prime Video RANDOM - Blue / Prime Video / Random
TV POWER - Power Tv	SHIFT + TV POWER - Shift + Power
AV - AV Tv	RDS AV INPUT - AV / Input / RDS
PR/CH+ - PR/CH+ Tv	+ CH PAGE - CH+ / Page+
PR/CH- - PR/CH- Tv	- CH PAGE - CH- / Page-
VOL+ - Vol+ Tv	+ VOL - Vol+
VOL- - Vol- Tv	- VOL - Vol-

Original	Recharge

