

 

 
 
 
 

 

 














 







Original	Rechange
 Power	 Power
 Open / Close	 Eject / Surround
 Band	 Smart / List
 Band	 Shift + 6
 DVD	 Shift + 2
 Aux	 Shift + 7
 USB	 Shift + 8
 1	 1
 2	 2
 3	 3
 Virtual	 D.Menu / Top
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

 

























Original	Rechange
 0	 0
 XTS Pro	 Picture / Format
 Marker	 Fav / Marker / PC
 Search	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 Sound	 Sound / Title
 Subtitle	 Subtitle / EQ
 Return	 Back / Return
 Setup	 Setup / OPT /
 Up / Preset +	 Up
 Up / Preset +	 Shift + >>I / Preset+
 Display	 Display / Media
 Left / Tun -	 Left
 Left / Tun -	 Shift + << /
 Enter	 OK
 Right / Tun +	 Right
 Right / Tun +	 Shift + >> /

Tune+





Original	Rechange
 Menu	 Menu / Home
 Down / Preset -	 Down
 Down / Preset -	 Shift + I<< / Preset-
 Title	 Shift + Sound / Title
 << Scan -	 << / Tune-
 >> Scan +	 >> / Tune+
 Play	 Play / Slow
 Volume +	 Vol+
 I<< / Skip-	 I<< / Preset-
 >>I / Skip+	 >>I / Preset+
 Pause / Step	 Pause / Step / Freeze
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Stop	 Stop / Hold
 Volume -	 Vol-
 Prog / Memo.	 TV/Radio /
 Clear	 Exit / Cancel / Clear

Original	Rechange
 Zoom	 Zoom / Size
 Mute	 Mute / Dimmer
 Sleep	 Sleep / Timer
 RDS / Resol.	 CH+ / Page+
 PTY / HDMI	 CH- / Page-
 Dimmer	 Shift + Mute / Dimmer
 Tv Channel+	 Shift + CH+ /
 Tv Vol+	 Shift + Vol+
 Tv Mute	 Shift + Smart / List
 Power Tv	 Shift + Power
 Tv Channel-	 Shift + CH- /
 Tv Vol-	 Shift + Vol-
 Tv Input	 Shift + AV / Input / RDS

