 

 

 







 



 



 











 



 



 



 



 

 





 



 











 



 


 
 
 




 

 
 






 

 

 





 

 



Original		Rechange		Original		Rechange	
	Power		Power		>>		>> / Tune+
	Open/Close		Eject / Surround		>>		>> / Preset+
	Function		Smart / List		Stop		Stop / Hold
	1		1		Play		Play / Slow
	2		2		Pause		Pause / Step / Freeze
	3		3		Speaker Level		TV/Radio /
	4		4		Vol+		Vol+
	5		5		Optical / Tv Sound		Setup / OPT /
	6		6		Sound Effect		Sound / Title
	7		7		Vol-		Vol-
	8		8		Mute		Mute / Dimmer
	9		9		Home		Menu / Home
	Clear		Exit / Cancel / Clear		3D Sound		Zoom / Size
	0		0		Info/Menu		Info / Angle
	Repeat		Shift + Green / APP /		Up/Preset+		Up
	I<<		I<< / Preset-		Left/Tuning-		Left
	<<		<< / Tune-		Enter		OK





Original	Recharge
 Right/Tuning+	 Right
 Down/Presets	 Down
 Back	 Back / Return
 Title/Pop Up	 Picture / Format
 Disc Menu	 D.Menu / Top
 Red/RDS	 Red / Netflix / Search
 Green/PTY	 Green / APP / Repeat
 Yellow/PTY Search	 Yellow / YouTube / Repeat
 Blue/Mono/Stereo	 Blue / Prime Video / Random
 Subtitle	 Subtitle / EQ
 Audio	 Audio / Lang I/II
 Sleep	 Sleep / Timer
 Music ID	 Text / Goto
 *	 Display / Media
 Power Tv	 Shift + Power
 Volum+ Tv	 Shift + Vol+
 PR/CH+ Tv	 CH+ / Page+

Original	Recharge
 AV Input Tv	 AV / Input / RDS
 Volum- Tv	 Shift + Vol-
 PR/CH- Tv	 CH- / Page-

