



Original	Rechange
Power	Power
Mute	Mute / Dimmer
Tuner/Band	Shift + 6
DVD	Shift + 2
Portable	Shift + 3
USB	Shift + 8
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
EQ	Shift + Subtitle / EQ

Original	Rechange
XDSS plus	Smart / List
Sound Mode	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Return	Back / Return
Setup	Setup / OPT /
Up/Preset+	Up
Display	Display / Media
Left/Tun.-	Left
Select/Enter	OK
Right/Tun.+	Right
Menu	Menu / Home
Down/Preset-	Down
Title	Shift + Sound / Title
Prog. Memo	TV/Radio /
<</Scan-	<< / Tune-
>>/Scan+	>> / Tune+





Original		Recharge		Original		Recharge	
	Volume+		Vol+		PTY		Picture / Format
	Repeat		Green / APP / Repeat				
	<I/Slow-		CH- / Page-				
	I>/Slow+		CH+ / Page+				
	Repeat A/B		Yellow / YouTube / Repeat				
	I<</Skip-		I<< / Preset-				
	>>I/Skip+		>>I / Preset+				
	Volume-		Vol-				
	Stop/Mo/ST		Stop / Hold				
	Pause/Step		Pause / Step / Freeze				
	Play		Play / Slow				
	Clear		Exit / Cancel / Clear				
	Zoom		Zoom / Size				
	Marker		Fav / Marker / PC				
	Search		Red / Netflix / Search				
	Sleep		Sleep / Timer				
	RDS		AV / Input / RDS				

