



Original	Rechange
Power	Power
Sources	AV / Input / RDS
Text	Text / Goto
T.Opt	Setup / OPT /
AD	Audio / Lang I/II
*	D.Menu / Top
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Guide	Guide / EPG / -/--
0	0

Original	Rechange
...	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+
Vol-	Vol-
Search	Sleep / Timer
CH-	CH- / Page-
TV	TV/Radio /
Netflix	Shift + Red / Netflix /
Home	Menu / Home
Prime video	Shift + Blue / Prime
Disney+	Display / Media
Up	Up
Rakuten Tv	Shift + Yellow / YouTube /
Left	Left
OK	OK
Right	Right



