 




 








 


 
 









Original	Rechange
 Power	 Power
 TV	 TV/Radio /
 Caption	 Display / Media
 AV Mode	 Smart / List
 [ ]/Ratio	 Subtitle / EQ
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 --/List	 Guide / EPG / --
 0	 0

Original	Rechange
 Flahsbk	 Zoom / Size
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 CH/Page+	 CH+ / Page+
 Vol-	 Vol-
 Audio	 Audio / Lang I/II
 CH/Page-	 CH- / Page-
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Info	 Info / Angle
 Sound	 Sound / Title
 Settings	 Setup / OPT /
 Up	 Up
 Q.Menu	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right





Original	Recharge	Original	Recharge
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Sleep		Sleep / Timer
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	.		Red / Netflix / Search
	..		Green / APP / Repeat
	::		Yellow / YouTube / Repeat
	::		Blue / Prime Video / Random

