 






 








 

 





 
 

 
 

 


 

 





 

 

 

 
 





 

 







Original	Recharge	Original	Recharge
 Power	 Power	 Vol+	 Vol+
 Energy Saving	 Text / Goto	 FAV/Mark	 Fav / Marker / PC
 AV Mode	 Picture / Format	 CH+	 CH+ / Page+
 Input	 AV / Input / RDS	 Vol-	 Vol-
 Tv/Rad	 TV/Radio /	 Ratio	 Eject / Surround
 1	 1	 CH-	 CH- / Page-
 2	 2	 Mute	 Mute / Dimmer
 3	 3	 Guide	 Guide / EPG / -/-
 4	 4	 Home	 Menu / Home
 5	 5	 Q.Menu	 D.Menu / Top
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 Enter	 OK
 9	 9	 Right	 Right
 List	 Smart / List	 Down	 Down
 0	 0	 Back	 Back / Return
 Q.View	 Setup / OPT /	 Info	 Info / Angle





Original		Recharge		Original		Recharge	
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause/Freeze		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Simplink		Display / Media				
	Subtitle		Subtitle / EQ				

