

 
 


 







 



 











 



 



 



 

 



 



 



















Original		Rechange		Original		Rechange	
	1		1		Left / Vol-		Left
	2		2		Left / Vol-		Vol-
	3		3		OK		OK
	Power		Power		Right / Vol+		Right
	4		4		Right / Vol+		Vol+
	5		5		Mute		Mute / Dimmer
	6		6		Menu / Setup		Menu / Home
	TV/R		TV/Radio /		Menu / Setup		Setup / OPT /
	7		7		Down / CH-		Down
	8		8		Down / CH-		CH- / Page-
	9		9		Audio1 -		<< / Tune-
	EPG		Guide / EPG / -/--		Audio1 +		>> / Tune+
	0		0		Set / Info		Info / Angle
	Up / CH+		Up		Next / ESC		Exit / Cancel / Clear
	Up / CH+		CH+ / Page+		Audio2 -		I<<< / Preset-
	A/D		Sound / Title		Audio2 +		>>>I / Preset+
	(<>) L		Audio / Lang I/II		Down		Smart / List





Original	Recharge	Original	Recharge
Stop / Recall	Stop / Hold		
Stop / Recall	Back / Return		
A/B / ADR	Yellow / YouTube / Repeat		
Memo	Fav / Marker / PC		

Original	Recharge

