














































 






 




 









Original		Recharge		Original		Recharge	
	Power		Power		Func		D.Menu / Top
	Mute		Mute / Dimmer		A / V+		AV / Input / RDS
	1		1		EPG		Guide / EPG / -/--
	2		2		Option		Setup / OPT /
	3		3		Vol -		Vol-
	4		4		Vol +		Vol+
	5		5		IPTV		Sound / Title
	6		6		FAV / SAT		Fav / Marker / PC
	7		7		Green		Green / APP / Repeat
	8		8		Yellow		Yellow / YouTube / Repeat
	9		9		Red		Red / Netflix / Search
	Info		Info / Angle		Blue		Blue / Prime Video / Random
	0		0		Up		Up
	Recall		Back / Return		Left		Left
	TV / Radio		TV/Radio /		OK		OK
	Sub.T / TXT		Subtitle / EQ		Right		Right
	Sub.T / TXT		Text / Goto		Menu		Menu / Home





Original		Recharge		Original		Recharge	
	Down		Down				
	Exit		Exit / Cancel / Clear				
	Sleep		Sleep / Timer				
	PVR List		Smart / List				
	PVR Info		Display / Media				
	T.Shift		Eject / Surround				
	<<		<< / Tune-				
	>>		>> / Tune+				
	Play / Pause		Play / Slow				
	Play / Pause		Pause / Step / Freeze				
	Jump		Picture / Format				
	Stop		Stop / Hold				
	Rec		Rec / Rec Mode				

