



Original	Rechange	Original	Rechange
 Power	 Power	 Music	 Audio / Lang I/II
 1	 1	 Info	 Info / Angle
 2	 2	 Up	 Up
 3	 3	 Copy	 AV / Input / RDS
 Tv System	 TV/Radio /	 Left	 Left
 4	 4	 Enter	 OK
 5	 5	 Right	 Right
 6	 6	 Goto	 Text / Goto
 Setup	 Setup / OPT /	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Vol+	 Vol+
 9	 9	 << / Tune-	 << / Tune-
 Menu	 Menu / Home	 >> / Tune+	 >> / Tune+
 0	 0	 DVD	 Shift + 2
 Photo	 Sound / Title	 Vol-	 Vol-
 Slow	 Shift + Play /	 I<< / Preset-	 I<< / Preset-
 Movie	 Picture / Format	 I>> / Preset+	 I>> / Preset+

Original	Rechange	Original	Rechange
 Music	 Audio / Lang I/II	 TV	 DVD
 Info	 Info / Angle	 SAT	 AUX
 Up	 Up	 SLOW	 STEP-FREEZE
 Copy	 AV / Input / RDS	 HOLD	 REC MODE
 Left	 Left	 TUNE-	 TUNE+
 Enter	 OK	 PRESET-	 PRESET+
 Right	 Right	 TITLE	 LANG I/II
 Goto	 Text / Goto	 EQ	 SURROUND
 Down	 Down	 SOUND	 AUDIO
 Return	 Back / Return	 SUBTITLE	 TIMER
 Vol+	 Vol+	 PICTURE	 ZOOM
 << / Tune-	 << / Tune-	 SLEEP	 PROGRAM
 >> / Tune+	 >> / Tune+	 TOP MENU	 OPT-TOOLS
 DVD	 Shift + 2	 GOTO	 RDS
 Vol-	 Vol-	 D.MENU	 SETUP
 I<< / Preset-	 I<< / Preset-	 TEXT	 AV INPUT
 I>> / Preset+	 I>> / Preset+	 HOME	 ANGLE





Original	Rechange
Sub-T	Subtitle / EQ
Mute	Mute / Dimmer
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold

Original	Rechange

