



Original		Rechange		Original		Rechange	
	Standby		Power		Audio		Audio / Lang I/II
	Mute		Mute / Dimmer		Subtitle		Subtitle / EQ
	1		1		Up		Up
	2		2		Left		Left
	3		3		Ok		OK
	4		4		Right		Right
	5		5		Down		Down
	6		6		Ch.List		Smart / List
	7		7		FAV		Fav / Marker / PC
	8		8		Exit/Cancel		Exit / Cancel / Clear
	9		9		CH+/Page+		CH+ / Page+
	Display		Display / Media		Vol+		Vol+
	0		0		S.Mode		Sound / Title
	Recall		Back / Return		Vol-		Vol-
	Setup		Setup / OPT /		P.Mode		Picture / Format
	EPG		Guide / EPG / -/-		CH-/Page-		CH- / Page-
	Source		AV / Input / RDS		Red/Goto		Red / Netflix / Search





Original	Recharge
Green/A-B	Green / APP / Repeat
Yellow/Repeat	Yellow / YouTube / Repeat
Blue/Angle	Blue / Prime Video / Random
Record	Rec / Rec Mode
Rec. List	Shift + Rec / Rec Mode
TV/Radio	TV/Radio /
Scaler	Menu / Home
Play	Play / Slow
Pause/Reveal	Pause / Step / Freeze
Stop/Index	Stop / Hold
I<<	I<< / Preset-
<</Mix	<< / Tune-
>>I	>>I / Preset+
>>	>> / Tune+
Text	Text / Goto
S.Page /	D.Menu / Top
Hold/Title	Shift + Stop / Hold

Hold

Original	Recharge
Zoom-	Shift + Zoom /
Zoom+/Size	Zoom / Size
Eject	Eject / Surround
Sleep	Sleep / Timer

