 


 
 



 
 


 

 



 







 



 
 


 



 

 
 
 

 
 
 
 
 
 
 

 

 



 

 

 









Original	Recharge	Original	Recharge
 Power	 Power	 Play	 Play
 Enter	 Ok	 Pause	 Pause
 Up	 Up	 Stop	 Stop
 Down	 Down	 Tune+ />>	 >>
 Right	 Right	 <</Tune-	 <<
 Left	 Left	 <<	 <<
 Vol+	 Vol +	 >>	 >>
 Vol-	 Vol -	 1	 1
 Mute	 Mute	 2	 2
 CH/Page+	 Ch +	 3	 3
 CH/Page-	 Ch -	 4	 4
 Back	 Back	 5	 5
 Setup	 Menu	 6	 6
 Option	 Options	 7	 7
 Info	 Info	 8	 8
 Sleep	 Sleep	 9	 9
 Home	 Smart	 0	 0

 

 
 


 
 
 


 

 
 



 







 
 


 
 










 
 


 

 







 


 
 


 
 







Original	Recharge	Original	Recharge
Red/Movie	Red	Phono	+ Shift + 9
Green/Music	Green	iPod/USB	+ Shift + Guide
Blue/Game	Blue	Media Player	Media
Yellow/Pure	Yellow	CD	Pre Ch
Favorite Station 1	D. Menu	Network	Guide
Favorite Station 2	Text	Internet Radio	TV/R
Favorite Station 3	Eject	Tv Audio	Dual
Favorite Station 4	AV		
InstaPreuve	3D		
CBL/SAT	+ Shift + 1		
DVD	+ Shift + 2		
Blu-ray	+ Shift + 3		
AUX1	+ Shift + 4		
M-XPport	+ Shift + 5		
Tuner	+ Shift + 6		
Game	+ Shift + 7		
AUX2	+ Shift + 8		

 


 

 
 

 

 



 
 
 
 





 


 
 



 



 
 


 
 
 
 



 





 

 



 




 


 





Original	Rechange	Original	Rechange
 Power	 Power	 2	 2
 CH/Page+	 Ch +	 3	 3
 CH/Page-	 Ch -	 4	 4
 Sleep	 Sleep	 5	 5
 Vol+	 Vol +	 6	 6
 Vol-	 Vol -	 7	 7
 Mute	 Mute	 8	 8
 Back	 Back	 9	 9
 Pause	 Pause	 0	 0
 Play	 Play	 Enter	 Ok
 Stop	 Stop	 Up	 Up
 Home	 Smart	 Down	 Down
 I<</Tune-	 I<<	 Right	 Right
 >>/Tune+	 >>I	 Left	 Left
 <<	 <<	 Favorite Station 1	 D. Menu
 >>	 >>	 Favorite Station 2	 Text
 1	 1	 Favorite Station 3	 Eject





Original	Rechange	Original	Rechange
 Power	 Power	 Play	 Play
 Tv Audio	 Dual	 I<</Tune-	 I<<
 Sleep	 Sleep	 >>I/Tune+	 >>I
 Mute	 Mute	 <<	 <<
 Back	 Back	 >>	 >>
 CH/Page+	 Ch +	 1	 1
 CH/Page-	 Ch -	 2	 2
 Vol+	 Vol +	 3	 3
 Vol-	 Vol -	 4	 4
 Up	 Up	 5	 5
 Down	 Down	 6	 6
 Right	 Right	 7	 7
 Left	 Left	 8	 8
 Enter	 Ok	 9	 9
 Home	 Smart	 0	 0
 Stop	 Stop	 Favorite Station 1	 D. Menu
 Pause	 Pause	 Favorite Station 2	 Text



