 




Original		Rechange		Original		Rechange	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Eco		3D
	CBL/SAT		1		Vol+		Vol +
	DVD		2		Vol-		Vol -
	Blu-ray		3		Mute		Mute
	Game		4		Info		Info
	AUX1		5		Option		Options
	Media Player		6		Up		Up
	TV/Audio		7		Down		Down
	AUX2		8		Right		Right
	Tuner		9		Left		Left
	USB		Guide		Enter		Ok
	CD		0		Back		Back
	Bluetooth		Pre Ch		Setup		Menu
	Internet Radio		Smart		I<</Tune-		I<<
	CH/Page+		Ch +		Play		Play
					Pause		Pause





	Original	Rechange		Original	Rechange
	>> /Tune+		>>		
	Smart Select 1		D. Menu		
	Smart Select 2		Text		
	Smart Select 3		Eject		
	Smart Select 4		AV		
	Green/Movie		Green		
	Red/Music		Red		
	Blue/Game		Blue		
	Yellow/Pure		Yellow		







Original		Rechange		Original		Rechange	
	Power		Power		CH/Page-		Ch -
	Sleep		Sleep		Vol+		Vol +
	CBL/SAT		1		Vol-		Vol -
	DVD		2		Mute		Mute
	Blu-ray		3		Up		Up
	Game		4		Down		Down
	AUX1		5		Right		Right
	Media Player		6		Left		Left
	TV Audio		7		Enter		Ok
	AUX2		8		Back		Back
	Tuner		9		I<</Tune-		I<<
	USB		Guide		Play		Play
	CD		0		Pause		Pause
	Bluetooth		Pre Ch		>>I/Tune+		>>I
	Internet Radio		Smart		Smart Select 1		D. Menu
	CH/Page+		Media		Smart Select 2		Text
			Ch +		Smart Select 3		Eject





Original		Rechange		Original		Rechange	
4	Smart Select 4	TIMER	AV				

