 







 



 









 















Original	Rechange
 Open/Close	 Eject / Surround
 Video On/Off	 Smart / List
 Dimmer	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 Clear	 Exit / Cancel / Clear
 4	 4
 5	 5
 6	 6
 +10	 Guide / EPG / -/--
 7	 7
 8	 8
 9	 9
 0	 0
 Return	 Back / Return

Original	Rechange
 Program	 TV/Radio /
 Search	 Red / Netflix / Search
 Top Menu	 D.Menu / Top
 Setup	 Setup / OPT /
 Up	 Up
 Menu	 Menu / Home
 Left	 Left
 Enter	 OK
 Right	 Right
 Stop	 Stop / Hold
 Down	 Down
 Play	 Play / Slow
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Random	 Blue / Prime Video / Random
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-





Original		Rechange		Original		Rechange	
	>>		>> / Tune+				
	F.Memo		Sleep / Timer				
	Video ADJ.		Picture / Format				
	A-B		Yellow / YouTube / Repeat				
	Repeat		Green / APP / Repeat				
	Display		Display / Media				
	Angle		Info / Angle				
	Subtitle		Subtitle / EQ				
	Audio		Audio / Lang I/II				
	Last Memo		Text / Goto				
	Condition Memo		AV / Input / RDS				

