



| Original   | Rechange  | Original   | Rechange  |
|--|---|--|---|
|  Power    |  Power   |  Pause        |  Pause   |
|  CH/Page+ |  Ch +    |  Stop         |  Stop    |
|  CH/Page- |  Ch -    |  Home         |  Smart   |
|  Sleep    |  Sleep   |  >>I/Tune+    |  >>I     |
|  Mute     |  Mute    |  I<</Tune-    |  I<<     |
|  Volume+  |  Vol +   |  >>           |  >>      |
|  Volume-  |  Vol -   |  <<           |  <<      |
|  Info     |  Info    |  Green/Movie  |  Green   |
|  Option   |  Options |  Red/Music    |  Red     |
|  Setup    |  Menu    |  Blue/Game    |  Blue    |
|  Back    |  Back   |  Yellow/Pure |  Yellow |
|  Up     |  Up    |  1          |  1     |
|  Enter  |  Ok    |  2          |  2     |
|  Down   |  Down  |  3          |  3     |
|  Right  |  Right |  4          |  4     |
|  Left   |  Left  |  5          |  5     |
|  Play   |  Play  |  6          |  6     |





 
 


 
 


 

 
 
 


 



 



 
 

 


 
 
 




 



 
 


 
 

 
 
 

 


 






| Original            | Recharge              |
|---------------------|-----------------------|
| 7                   | 7                     |
| 8                   | 8                     |
| 9                   | 9                     |
| 0                   | 0                     |
| 1 Smart Select 1    | REPEAT TEXT Text      |
| 2 Smart Select 2    | TIMER AV AV           |
| 3 Smart Select 3    | PICTURE FORMAT Format |
| 4 Smart Select 4    | ECO 3D 3D             |
| TV AUDIO TV Audio   | SEARCH TV/R TV/R      |
| CBL/SAT CBL/SAT     | SHIFT + 1 Shift + 1   |
| DVD DVD             | SHIFT + 2 Shift + 2   |
| Blu-ray Blu-ray     | SHIFT + 3 Shift + 3   |
| AUX1 AUX1           | SHIFT + 4 Shift + 4   |
| TUNER Tuner         | SHIFT + 5 Shift + 5   |
| Bluetooth Bluetooth | SHIFT + 6 Shift + 6   |
| GAME Game           | SHIFT + 7 Shift + 7   |
| PHONO Phono         | SHIFT + 9 Shift + 9   |

| Original                      | Recharge                          |
|-------------------------------|-----------------------------------|
| AUX2 AUX2                     | SHIFT + 8 Shift + 8               |
| USB USB                       | GUIDE Guide                       |
| MEDIA PLAYER Media Player     | SHIFT + GUIDE Shift + Guide       |
| INTERNET RADIO Internet Radio | FAV PRE-CH Pre Ch                 |
| CD CD                         | SHIFT + 0 Shift + 0               |
| Heos (Online) Heos (Online)   | SHIFT + FAV PRE-CH Shift + Pre Ch |





| Original   | Rechange  | Original   | Rechange   |
|--|---|--|--|
|  Power    |  Power   |  >>               |  >>       |
|  CH/Page+ |  Ch +    |  <<               |  <<       |
|  CH/Page- |  Ch -    |  >> /Tune+        |  >>       |
|  Sleep    |  Sleep   |   <</Tune-        |   <<      |
|  Mute     |  Mute    |  1                |  1        |
|  Volume+  |  Vol +   |  2                |  2        |
|  Volume-  |  Vol -   |  3                |  3        |
|  Back     |  Back    |  4                |  4        |
|  Up       |  Up      |  5                |  5        |
|  Down     |  Down    |  6                |  6        |
|  Right   |  Right  |  7               |  7       |
|  Left   |  Left  |  8              |  8      |
|  Enter  |  Ok    |  9              |  9      |
|  Home   |  Smart |  0              |  0      |
|  Stop   |  Stop  |  Smart Select 1 |  Text   |
|  Pause  |  Pause |  Smart Select 2 |  AV     |
|  Play   |  Play  |  Smart Select 3 |  Format |





 



 
 




 




 


 



 













 







 
 



 


 


 


 




| Original       | Recharge       | Original | Recharge |
|----------------|----------------|----------|----------|
| Smart Select 4 | 3D             |          |          |
| TV Audio       | TV/R           |          |          |
| Media Player   | Shift + Guide  |          |          |
| Internet Radio | Pre Ch         |          |          |
| CBL/SAT        | Shift + 1      |          |          |
| DVD            | Shift + 2      |          |          |
| Blu-ray        | Shift + 3      |          |          |
| AUX1           | Shift + 4      |          |          |
| Tuner          | Shift + 5      |          |          |
| Bluetooth      | Shift + 6      |          |          |
| Game           | Shift + 7      |          |          |
| AUX2           | Shift + 8      |          |          |
| Phono          | Shift + 9      |          |          |
| USB            | Guide          |          |          |
| CD             | Shift + 0      |          |          |
| Online Music   | Shift + Pre Ch |          |          |

| Original | Recharge |
|----------|----------|
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |





| Original   | Rechange  | Original   | Rechange   |
|--|---|--|--|
|  Power    |  Power   |  >> /Tune+        |  >>       |
|  CH/Page+ |  Ch +    |   <</Tune-        |   <<      |
|  CH/Page- |  Ch -    |  <<               |  <<       |
|  Sleep    |  Sleep   |  >>               |  >>       |
|  Mute     |  Mute    |  1                |  1        |
|  Volume+  |  Vol +   |  2                |  2        |
|  Volume-  |  Vol -   |  3                |  3        |
|  Back     |  Back    |  4                |  4        |
|  Up       |  Up      |  5                |  5        |
|  Down     |  Down    |  6                |  6        |
|  Right   |  Right  |  7               |  7       |
|  Left   |  Left  |  8              |  8      |
|  Enter  |  Ok    |  9              |  9      |
|  Home   |  Smart |  0              |  0      |
|  Stop   |  Stop  |  Smart Select 1 |  Text   |
|  Pause  |  Pause |  Smart Select 2 |  AV     |
|  Play   |  Play  |  Smart Select 3 |  Format |





| Original   | Recharge   |
|--|--|
|  Smart Select 4 |  3D               |
|  TV Audio       |  TV/R             |
|  Media Player   |  Shift + Guide    |
|  Internet Radio |  Pre Ch           |
|  CBL/SAT        |  Shift + 1        |
|  DVD            |  Shift + 2        |
|  Blu-ray        |  Shift + 3        |
|  AUX1           |  Shift + 4        |
|  Tuner          |  Shift + 5        |
|  Bluetooth      |  Shift + 6        |
|  Game         |  Shift + 7      |
|  AUX2         |  Shift + 8      |
|  Phono        |  Shift + 9      |
|  USB          |  Guide          |
|  CD           |  Shift + 0      |
|  Online Music |  Shift + Pre Ch |

| Original | Recharge |
|----------|----------|
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |
|          |          |

