



Original	Rechange	Original	Rechange
 Power	 Power	 Home	 Smart
 Volume+	 Vol +	 Stop	 Stop
 Volume-	 Vol -	 Pause	 Pause
 Mute	 Mute	 Play	 Play
 Sleep	 Sleep	 I<</Tune-	 I<<
 Eco	 3D	 >>/Tune+	 >>I
 CH/Page+	 Ch +	 <<	 <<
 CH/Page-	 Ch -	 >>	 >>
 Info	 Info	 Smart Select 1	 D. Menu
 Option	 Options	 Smart Select 2	 Text
 Back	 Back	 Smart Select 3	 Eject
 Setup	 Menu	 Smart Select 4	 AV
 Up	 Up	 Green/Movie	 Green
 Down	 Down	 Red/Music	 Red
 Right	 Right	 Blue/Game	 Blue
 Left	 Left	 Yellow/Pure	 Yellow
 Enter	 Ok	 1	 1


 
 
 




Original		Rechange		Original		Rechange	
	Power		Power		>>		>>
	Volume+		Vol +		<<		<<
	Volume-		Vol -		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Sleep		Sleep		Smart Select 1		D. Menu
	CH/Page+		Ch +		Smart Select 2		Text
	CH/Page-		Ch -		Smart Select 3		Eject
	Back		Back		Smart Select 4		AV
	Up		Up		1		1
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Enter		Ok		5		5
	Home		Smart		6		6
	Stop		Stop		7		7
	Pause		Pause		8		8
	Play		Play		9		9





Original		Rechange		Original		Rechange	
	Power		Power		>>		>>
	Volume+		Vol +		<<		<<
	Volume-		Vol -		>> /Tune+		>>
	Mute		Mute		<</Tune-		<<
	Sleep		Sleep		1		1
	CH/Page+		Ch +		Smart Select 1		D. Menu
	CH/Page-		Ch -		Smart Select 2		Text
	Back		Back		Smart Select 3		Eject
	Up		Up		Smart Select 4		AV
	Down		Down		2		2
	Right		Right		3		3
	Left		Left		4		4
	Enter		Ok		5		5
	Home		Smart		6		6
	Stop		Stop		7		7
	Pause		Pause		8		8
	Play		Play		9		9



