

























 

 







 





 















 



 





































 





Original	Recharge
 Standby	 Shift + Power
 On	 Power
 HDMI	 AV / Input / RDS
 A/D	 Audio / Lang I/II
 Test Tone	 Text / Goto
 SPKR A-B	 Setup / OPT /
 Z2	 Yellow / YouTube / Repeat
 Z3	 Blue / Prime Video / Random
 BD	 Green / APP / Repeat
 DVD	 2
 VCR	 4
 SAT	 0
 GAME	 Fav / Marker / PC
 AUX1	 7
 Network	 9
 USB	 8
 TV	 1

Original	Recharge
 CD	 3
 CDR	 Guide / EPG / -/-
 Tune	 6
 M-XP	 5
 Input Up	 >>I / Preset+
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Input Down	 I<< / Preset-
 Display	 Display / Media
 Surr	 Eject / Surround
 Volume-	 Vol-
 Shift	 Back / Return
 Up	 Up
 Info	 Info / Angle
 Search	 Red / Netflix / Search
 Left	 Left
 Enter	 OK



 





Original		Rechange		Original		Rechange	
	Power		Power		>>		>> / Preset+
	Mute		Mute / Dimmer		<<		<< / Tune-
	Volume+		Vol+		>>		>> / Tune+
	Display		Display / Media		1		1
	Memory		Smart / List		2		2
	Volume-		Vol-		3		3
	Up		Up		Repeat		Green / APP / Repeat
	Info		Info / Angle		4		4
	Left		Left		5		5
	Enter		OK		6		6
	Right		Right		Random		Blue / Prime Video / Random
	Menu		Menu / Home		7		7
	Down		Down		8		8
	Pause		Pause / Step / Freeze		9		9
	Play		Play / Slow		CLR		Exit / Cancel / Clear
	Stop		Stop / Hold		0		0
	I<<		I<< / Preset-		+10		Guide / EPG / -/-

 

































 



 





 





 



Original	Rechange	Original	Rechange
 CH-	 CH- / Page-		
 CH+	 CH+ / Page+		





Original	Rechange
 Power	 Power
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 T.Mode	 Text / Goto
 Display	 Display / Media
 Memory	 Setup / OPT /
 Volume-	 Vol-
 Info	 Info / Angle
 Enter	 OK
 Menu	 Menu / Home
 Band	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6

Original	Rechange
 7	 7
 8	 8
 9	 9
 CLR	 Exit / Cancel / Clear
 0	 0
 Tune-	 << / Tune-
 Tune+	 >> / Tune+
 Preset-	 I<< / Preset-
 Preset+	 >>I / Preset+

