






 









 


 

Original	Recharge
Sleep	Sleep / Timer
Power OFF	Shift + Power
Power On	Power
Disc	Shift + 1
Tuner	Shift + 6
USB1/iPod	Shift + 8
AUX	Shift + 7
1	1
2	2
3	3
Rand	Shift + Blue / Prime
4	4
5	5
6	6
Repeat	Shift + Green / APP /
7	7
8	8

Original	Recharge
9	9
A-B	Shift + Yellow / YouTube /
0	0
SRCH	Shift + Red / Netflix /
Clear	Exit / Cancel / Clear
CH+	CH+ / Page+
Mute	Mute / Dimmer
Vol+	Vol+
CH-	CH- / Page-
Setup	Setup / OPT /
Vol-	Vol-
Top Menu	Shift + D.Menu / Top Menu
Up	Up
Menu/Pop Up	D.Menu / Top
Left	Left
Enter	OK
Right	Right





Original	Recharge
 Home	 Menu / Home
 Down	 Down
 Return	 Back / Return
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 I<<	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 RDS/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Angle	 Info / Angle
 Pic In Pic	 Picture / Format
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat

Original	Recharge
 Blue	 Blue / Prime Video / Random
 S.Direct	 TV/Radio /
 SDB Tone	 Fav / Marker / PC
 Dolby	 Guide / EPG / -/-
 Stereo	 Sound / Title
 Display	 Display / Media
 Dimmer	 Shift + Mute / Dimmer
 Clock	 Shift + Sleep / Timer
 Power Tv	 Shift + OK
 Input Tv	 AV / Input / RDS
 Remote/Browse	 Smart / List
 Play/Pause	 Shift + Play /

