

 


 







 
 
 





Original	Recharge
 Power	 Power
 Info	 Info / Angle
 Lang	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 [...]	 Subtitle / EQ
 ♥	 Fav / Marker / PC
 ▲	 Shift + Up
 [=]	 Text / Goto
 EPG	 Guide / EPG / -/--
 ▼	 Shift + Down
 Menu	 Menu / Home
 CH+	 CH+ / Page+
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK

Original	Recharge
 Right	 Right
 Vol+	 Vol+
 List	 Smart / List
 CH-	 CH- / Page-
 Down	 Down
 ←	 Back / Return
 1	 1
 2	 2
 3	 3
 [ <> ]	 Picture / Format
 4	 4
 5	 5
 6	 6
 TV/R	 TV/Radio /
 7	 7
 8	 8
 9	 9





Original	Recharge
0	0
I<<	I<< / Preset-
<<	<< / Tune-
>>	>> / Tune+
>>	>>  / Preset+
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
Red/Timer	Sleep / Timer
Red/Timer	Red / Netflix / Search
Eject	Eject / Surround
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Recharge

