



Original	Rechange
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
--	Shift + Guide / EPG / -/-
0	0
Back	Back / Return
Text	Text / Goto
Subtitle	Subtitle / EQ
Format	Picture / Format

Original	Rechange
Fav	Fav / Marker / PC
Vol+	Vol+
Page+	Shift + CH+ /
CH+	CH+ / Page+
Vol-	Vol-
Page-	Shift + CH- /
CH-	CH- / Page-
Lang	Audio / Lang I/II
TV/Rad	TV/Radio /
Info	Info / Angle
EPG	Guide / EPG / -/-
Up	Up
Left	Left
OK	OK
Right	Right
Menu	Menu / Home
Down	Down





Original	Recharge
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue / SOS	Blue / Prime Video / Random
Timer	Sleep / Timer
Eject	Eject / Surround
List	Smart / List
II>	Shift + Pause / Step / Step /
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Rec	Rec / Rec Mode
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Recharge

